# **INSTRUCTION SHEET** for: 2PT 980 980-xxx / 1009V / 1009V-24V



## **ADR - APPLICATION AND** MOUNTING INSTRUCTIONS

LED SAFETY DAYLIGHT™ (DRL) - VERTICAL MOUNT 1009V: 12V DC Only 1009V-24V: 24V DC Only

## Lens Marking and ADR 13/00 Installation Requirements

This lamp module, identified by lens marking 0880 B, with clear lens was manufactured to comply with

ADR 76/00 Daytime Running Lamp.


- Lamp module mounting surface must be vertical to the ground.
- Lamp module reference axis must be parallel to the vehicle longitudinal axis.
- · Lamp module centre line must be vertical.
- Lamp module must be visible from 20° inboard and outboard, as well as from 10° above and below the horizontal axis.
- Two lamp modules are required.
- Lamps modules must not be mounted less than 250 mm and more than 1500 mm above the ground.
- Lamp modules must be mounted within 400 mm of the widest point of the vehicle and no closer than 600 mm together.

Notes: Please refer to ADR 13/00 for more details.

LENS IDENTIFICATION NUMBER: 0880 B

### **Product Contents**

Description	1009V	1009V-24V
LED Safety DayLight™ with 2.5 m cable	x1	x1
Screw Cap	x2	x2
Mounting Screw	x2	x2
Application and Mounting Instructions	x1	x1

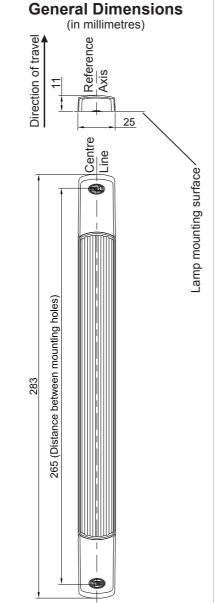

					•		
CATALOGUE NUMBER	ENGINEERING NUMBER	CRN NUMBER		COMPLIANCE NUMBER		ADR 51/00 GLOBE	ADR APPLICABLE
1009V 1009V-24V	980 880-40 980 880-50		962 965	1009V*DRL* 1009-24VDRI	_	N/A LED	ADR 76/00
	AMENDME	NTS			ADR VERI	COMPLIANCE	ISSUE DATE:
						/	01/2014
					-	out.	958 780-92
Hella-New Zealand Limited, Auckland							

#### **INSTRUCTION SHEET**

## for: 2PT 980 980-xxx / 1009V / 1009V-24V



## **ADR - APPLICATION AND** MOUNTING INSTRUCTIONS

LED SAFETY DAYLIGHT™ (DRL) - VERTICAL MOUNT 1009V: 12V DC Only 1009V-24V: 24V DC Only

## Lens Marking and ADR 13/00 Installation Requirements

This lamp module, identified by lens marking 0880 B, with clear lens was manufactured to comply with

ADR 76/00 Daytime Running Lamp.

- Lamp module mounting surface must be vertical to the ground.
- Lamp module reference axis must be parallel to the vehicle longitudinal axis.
- Lamp module centre line must be vertical.
- Lamp module must be visible from 20° inboard and outboard, as well as from 10° above and below the horizontal axis.
- Two lamp modules are required.
- Lamps modules must not be mounted less than 250 mm and more than 1500 mm above the ground.
- Lamp modules must be mounted within 400 mm of the widest point of the vehicle and no closer than 600 mm together.

Notes: Please refer to ADR 13/00 for more details.

LENS IDENTIFICATION NUMBER: 0880 B

### **Product Contents**

Description	1009V	1009V-24V
LED Safety DayLight™ with 2.5 m cable	x1	x1
Screw Cap	x2	x2
Mounting Screw	x2	x2
Application and Mounting Instructions	x1	x1

# **General Dimensions** (in millimetres) Direction of travel

958 780-92 / 05.19

CATALOGUE NUMBER	EI	NGINEERING NUMBER	l	RN //BER		PLIANO JMBER	E	ADR 51/00 GLOBE	ADR APPLICABLE
1009V 1009V-24V	ı	980 880-40 980 880-50	1	962 965		V*DRL*( 24VDRL	-	N/A LED	ADR 76/00
		AMENDME	NTS				ADR VERI		ISSUE DATE:
									01/2014
	$\rightarrow$							1_	
								on	958 780-92
Hella-New Zeal	Hella-New Zealand Limited, Auckland								

# INSTRUCTION SHEET for: 2PT 980 980-xxx / 1009V / 1009V-24V



## **Mounting Instructions**

- Lamp must be mounted vertically on a flat surface with no curvature.
- Drill two 3 mm Ø mounting holes at 265 mm centres through the mounting surface to allow fitment of the DRL. See previous page for correct positioning.
- Using the mounting screws tighten the DRL to the mounting surface (Maximum torque 1.5Nm).
- Fit screw caps.

Note: Do not overtighten the mounting screws in the plastic lens.

If it is necessary to remove the screw caps, lever them out with a small flat head screw driver.

## **Wiring Instructions**


- It is a legal requirement for daytime running lamps to illuminate only when the ignition is switched ON and the vehicle lighting is switched OFF.
- To meet this requirement it is recommended that a 5 pin change-over relay (supplied separately) is utilised as per the wiring diagram below.

Wire Colour	Connect to	Power Consumption
Black	Terminal 31: Earth (-)	-
Red	3 watts	

Note 1: Lamps and relay must be protected by a fuse rated at 3 amperes maximum.

Note 2: Lamp is polarity conscious. The reversal of the polarity will not damage this product but will inhibit its function.

Note 3: Daytime running lamps are not a substitute for dipped beam headlights at dusk/dawn or during darkness.

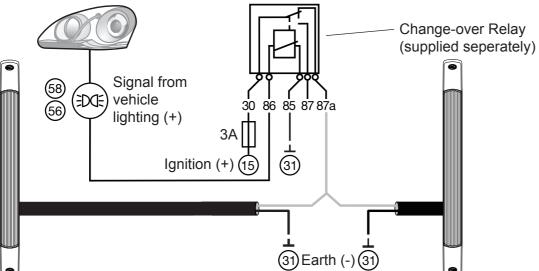

### **FIT AND FORGET - BY DESIGN**

Congratulations, the product you have selected comes from *HELLA* - a world leader in LED lighting design.

FIT & FORGET BY DESIGN

Following the launch of the first LED automotive signal lamps in 1990, *HELLA* Design and Innovation continues to set new standards. *HELLA* innovative solutions have been incorporated into millions of lamps, engineered and tested to the most stringent standards, to suit the most demanding environmental conditions.

The cornerstone to the success of our products is our no compromise *Fit and Forget - by Design* philosophy which is incorporated into every step of the product life cycle.

In a world consuming finite resources at an ever faster rate, *Fit and Forget - by Design* is the right environmental choice that also makes perfect economic sense to customers that consider the total life cycle Cost of Ownership.

For general comments about Hella's products please contact us on E-mail at techfeedback@hella.co.nz

# INSTRUCTION SHEET for: 2PT 980 980-xxx / 1009V / 1009V-24V



FIT &

**FORGET** 

BY DESIGN

# **Mounting Instructions**

- · Lamp must be mounted vertically on a flat surface with no curvature.
- Drill two 3 mm Ø mounting holes at 265 mm centres through the mounting surface to allow fitment of the DRL. See previous page for correct positioning.
- Using the mounting screws tighten the DRL to the mounting surface (Maximum torque 1.5Nm).
- Fit screw caps.

Note: Do not overtighten the mounting screws in the plastic lens.

If it is necessary to remove the screw caps, lever them out with a small flat head screw driver.

## **Wiring Instructions**


- It is a legal requirement for daytime running lamps to illuminate only when the ignition is switched ON and the vehicle lighting is switched OFF.
- To meet this requirement it is recommended that a 5 pin change-over relay (supplied separately) is utilised as per the wiring diagram below.

Wire Colour	Connect to	Power Consumption
Black	Terminal 31: Earth (-)	-
Red	Terminal 87a: DRL signal (+)	3 watts

Note 1: Lamps and relay must be protected by a fuse rated at 3 amperes maximum.

Note 2: Lamp is polarity conscious. The reversal of the polarity will not damage this product but will inhibit its function.

Note 3: Daytime running lamps are not a substitute for dipped beam headlights at dusk/dawn or during darkness.

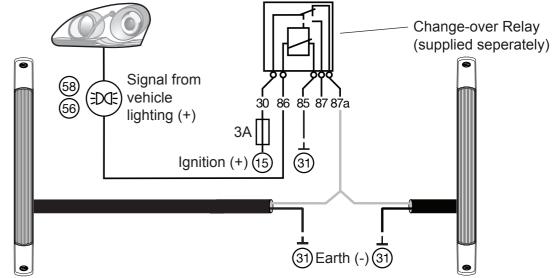

### FIT AND FORGET - BY DESIGN

Congratulations, the product you have selected comes from *HELLA* - a world leader in LED lighting design.

Following the launch of the first LED automotive signal lamps in 1990, *HELLA* Design and Innovation continues to set new standards. *HELLA* innovative solutions have been incorporated into millions of lamps, engineered and tested to the most stringent standards, to suit the most demanding environmental conditions.

The cornerstone to the success of our products is our no compromise *Fit and Forget - by Design* philosophy which is incorporated into every step of the product life cycle.

In a world consuming finite resources at an ever faster rate, *Fit and Forget - by Design* is the right environmental choice that also makes perfect economic sense to customers that consider the total life cycle Cost of Ownership.

 $For \ general \ comments \ about \ Hella's \ products \ please \ contact \ us \ on \ E-mail \ at \ techfeed back@hella.co.nz$